


USER OPERATION INSTRUCTION

Read this instructions before operation

Digital Handset Operation

1. Panel

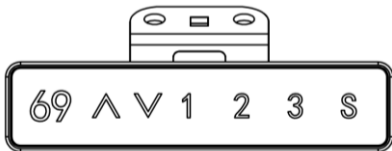

2. Initialization procedure

Step	Operation	Motion
1	Press and hold \wedge & \vee simultaneously for more than 3 seconds	Legs begin to move down at half speed of normal operation, it indicates 000 on the screen and buzzer rings.
2	Keep pressing \wedge & \vee	Legs move down to the lowest position and rebound 2-5 mm, then stop
3	Release \wedge & \vee together	Initialization is completed

The initialization procedure must be completed before the first running after table is installed or parts replaced.

3.Move up and down

Step	Operation	Motion
1	Press and hold \wedge	Legs move up
2	Release \wedge	Legs stop
3	Press and hold \vee	Legs move down
4	Release \vee	Legs stop

4.Set memory positions

Step	Operation	Motion
1	Press and hold \wedge or \vee , then release	Run the legs to the position you want the table surface to be
2	Click button 1,2 or 3 within next 3 seconds	Position 1 ,2 or 3 is saved

5. Move to the memorized positions

Step	Operation	Motion
1	Press the button 1 , 2 or 3, then release	Legs return to the corresponding position saved

6. Toggle the display unit format

Step	Operation	Motion
1	Press and hold button S and ∇ , keep for about 3 seconds	The height information will be changed between centimeters and inches
2	Release the buttons	completed

In inch format, the minimum height variation as the legs move up or down is 0.5 inches, while in centimeter format is 1 centimeter.

7.Lock the stroke

Step	Operation	Motion
1	Press and hold \wedge or \vee , then release	Run the legs to the position you want the table surface to be
2	Press and hold button S and button 1 simultaneously, keep for about 3 seconds	Letter “L” is indicated on the screen and buzzer rings. That means the position is locked at the lowest position that the table can be moved to
3	Press and hold button S and button 3 simultaneously, keep for about 3 seconds	Letter “H” is indicated on the screen and buzzer rings. That means the position is locked at the highest position that the table can be moved to

4	Release the buttons	Completed
---	---------------------	-----------

1.Legs aren't able to run below the locked position.

2.Memory position(s) are/is below the locked position will be lost even after the table is unlocked, you need to follow SET MEMORY POSITIONS again to reset these memory positions .

8.Unlock the stroke

Step	Operation	Motion
1	Press and hold button S and button 2 simultaneously, keep about 3 seconds	Letter "C" is indicated on the screen. That means the table's unlocked and can be moved in full range
2	Release the buttons	Completed

9.Adjust the sensitivity of gyro

Step	Operation	Motion
1	Press and hold button S for more than 5 seconds	The display flashes and buzzer rings
2	Release button S and press 1,2 or 3 within 3 seconds.	The display indicates 001,002 or 003. It means the sensitivity level of gyro (1 means no , 2 means poor, 3 means high)
3	Release the button	The sensitivity of gyro adjusted

Trouble Shooting

Fault Phenomenon	Handling
After connecting the power, press up or down, the legs have no response.	Re-initialize the table;
	Check if the connection is correct or not;
	Please contact your supplier.
After connecting the power, press and hold up& down together, the legs have no response.	Check if the connection is correct or not;
	Please contact your supplier.
The legs rising slowly.	Check if the input power is correct or not; Please contact your supplier
The legs don't move according	Please contact your supplier.

to your operation.	
One leg moves while the other leg does not move.	Check if the connection is correct or not;
	Please contact your supplier.
Legs only move down and don't move up.	Re-initialize the table;
	Please contact your supplier.
Table slides down itself.	Check if the weight of the load on the table exceeds 80KG or not;
	Please contact your supplier.
The table goes into initialization frequently.	Check if the weight of the load on the table exceeds 80KG or not;
	Check the noise of the motor;
	Please contact your supplier.

